
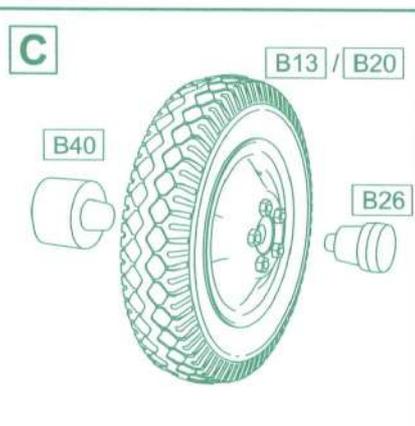
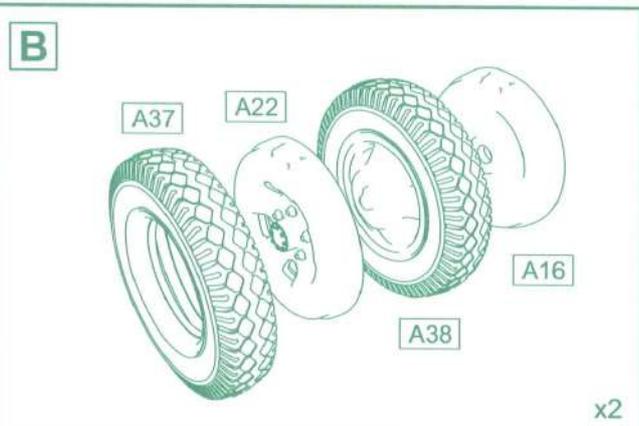
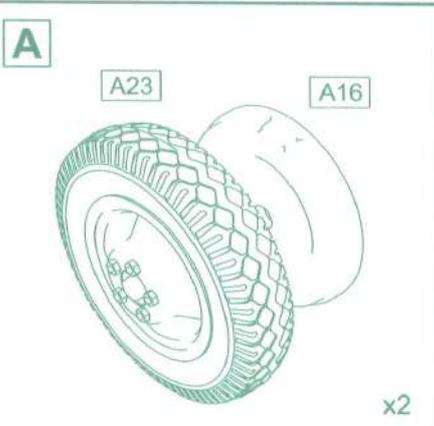
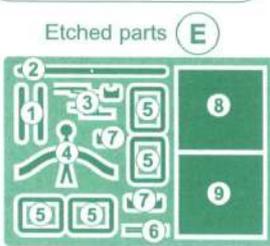
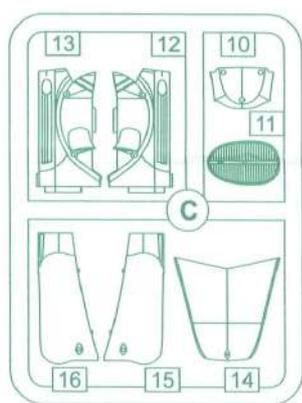
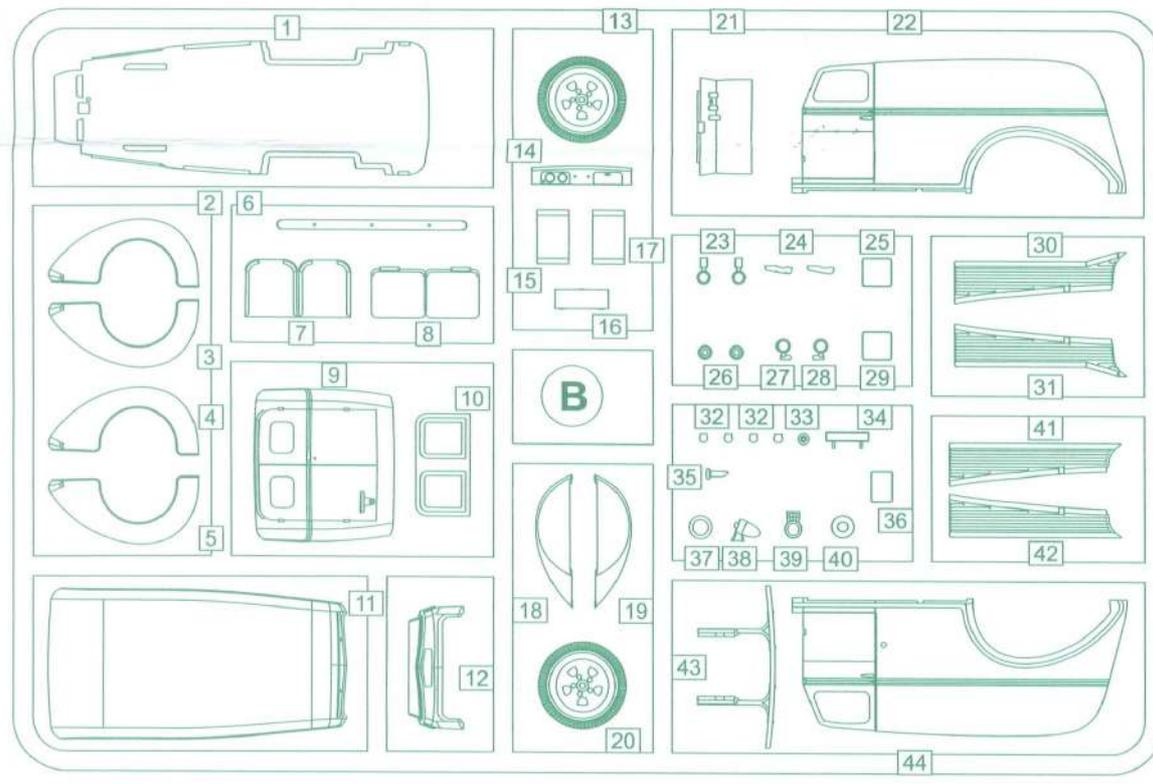



134 in Panel Van mod.1939

1/72 scale


Plastic model kit. Cat. #72589

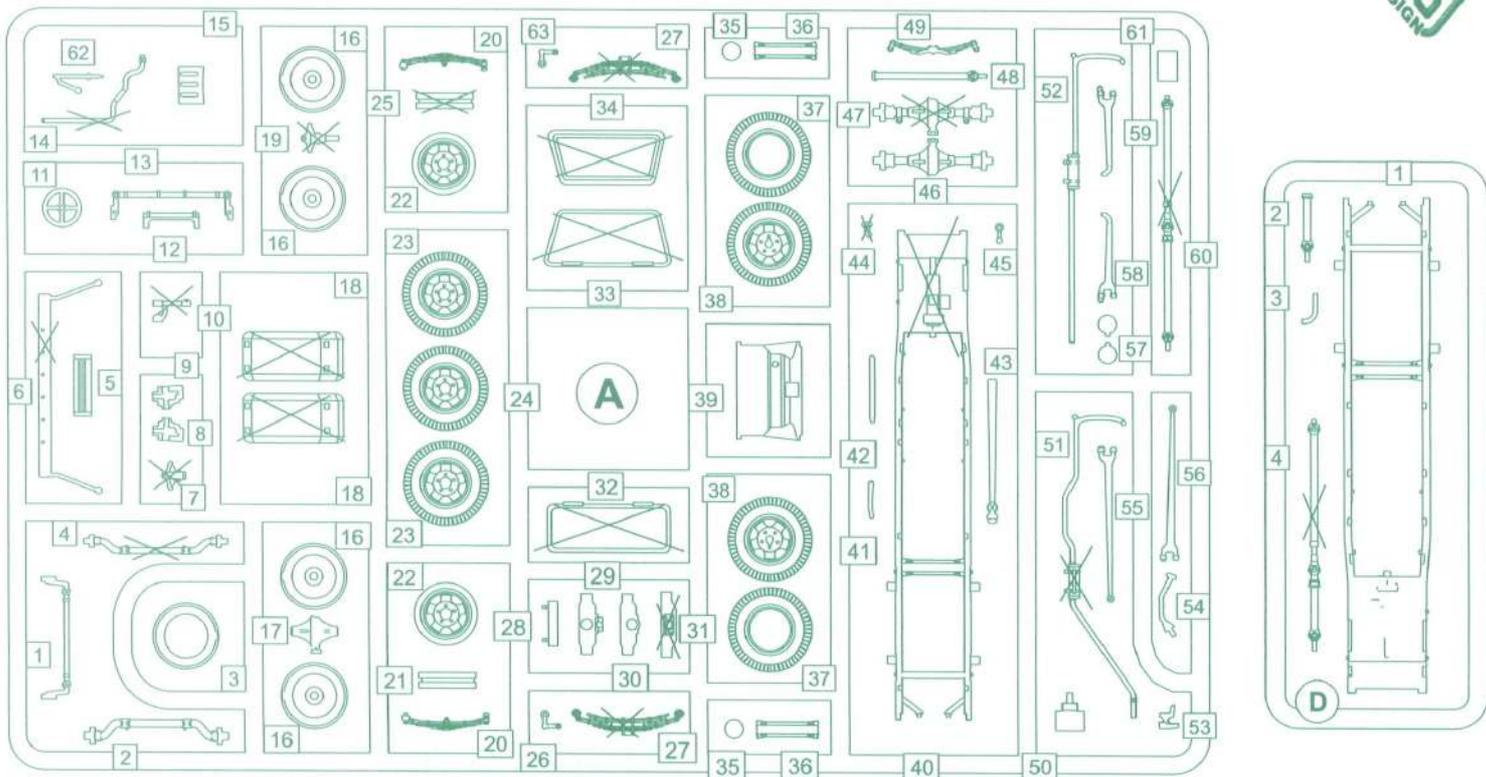





Bottom view

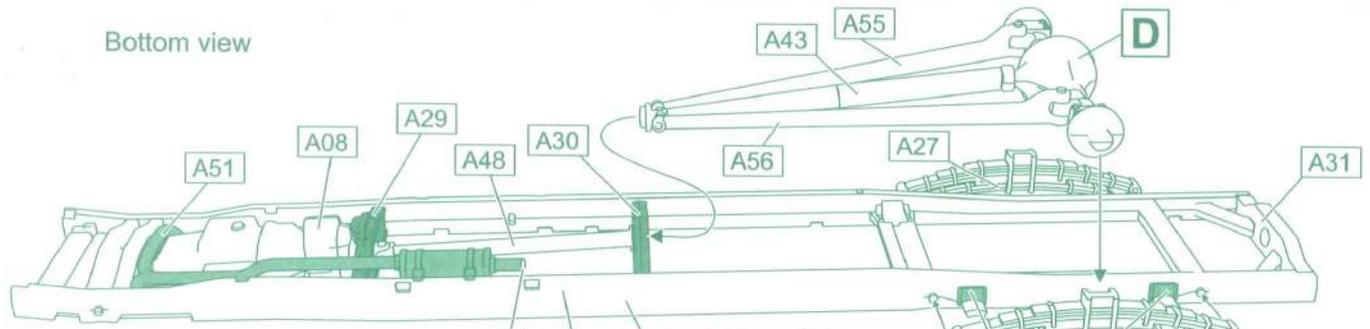

Bottom view



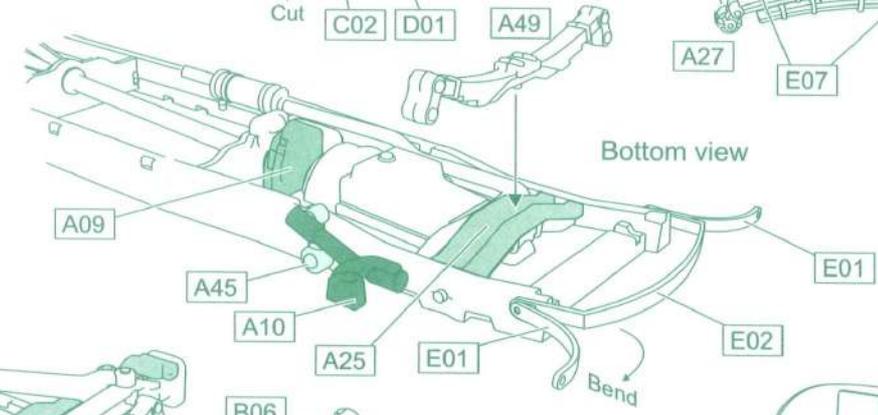


Bottom view

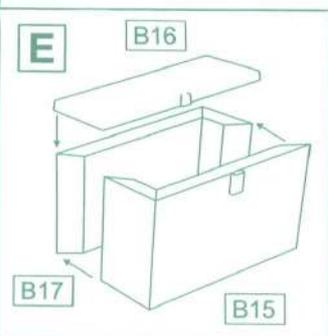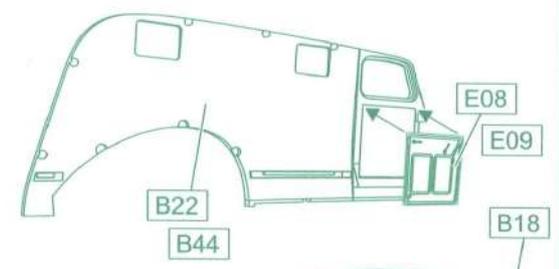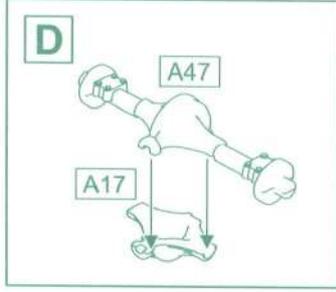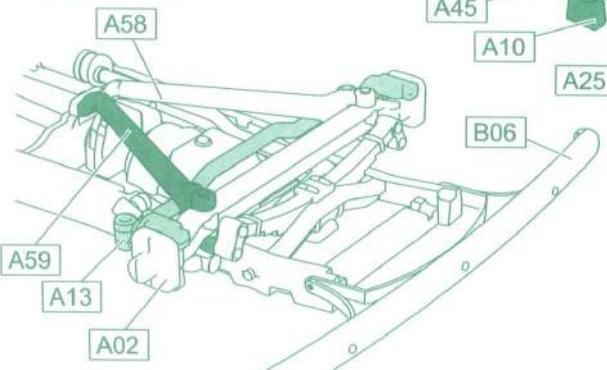

Cut a window from inner side. For police van ONLY!




Drill 0.3 mm

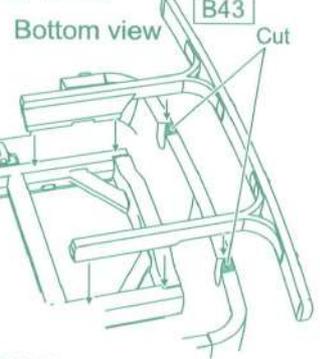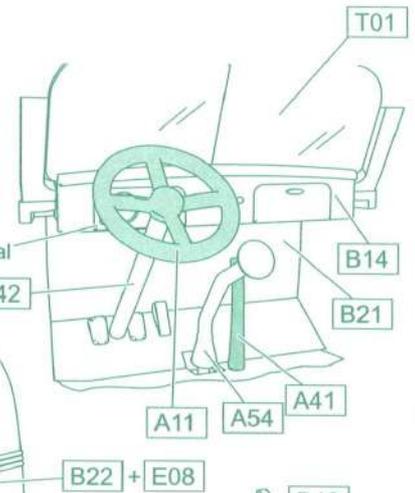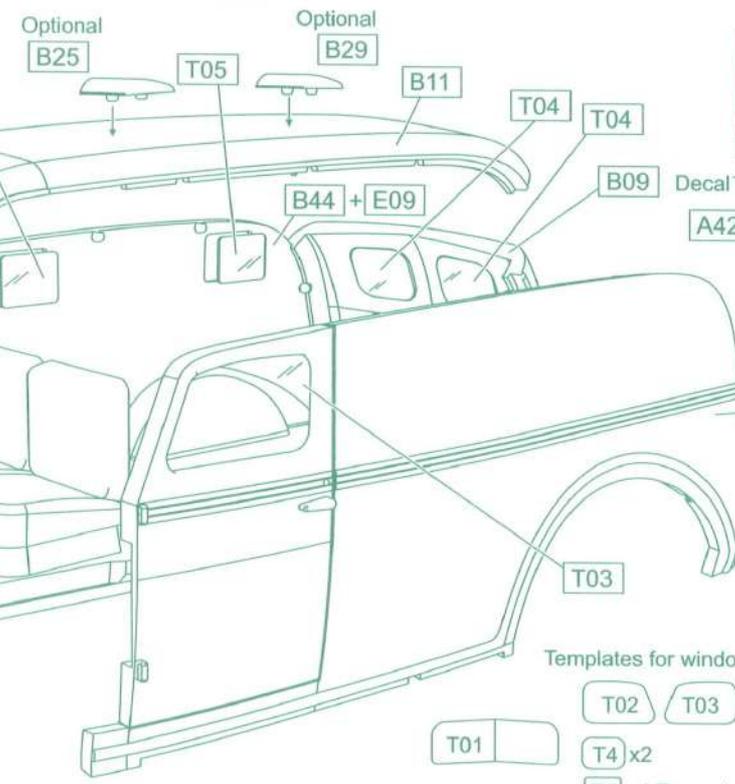


Templates for windows

- T02
- T03
- T01
- T4 x2
- T5 x4 For police van ONLY!

For parts B25 and B29 open installation holes from inner side.

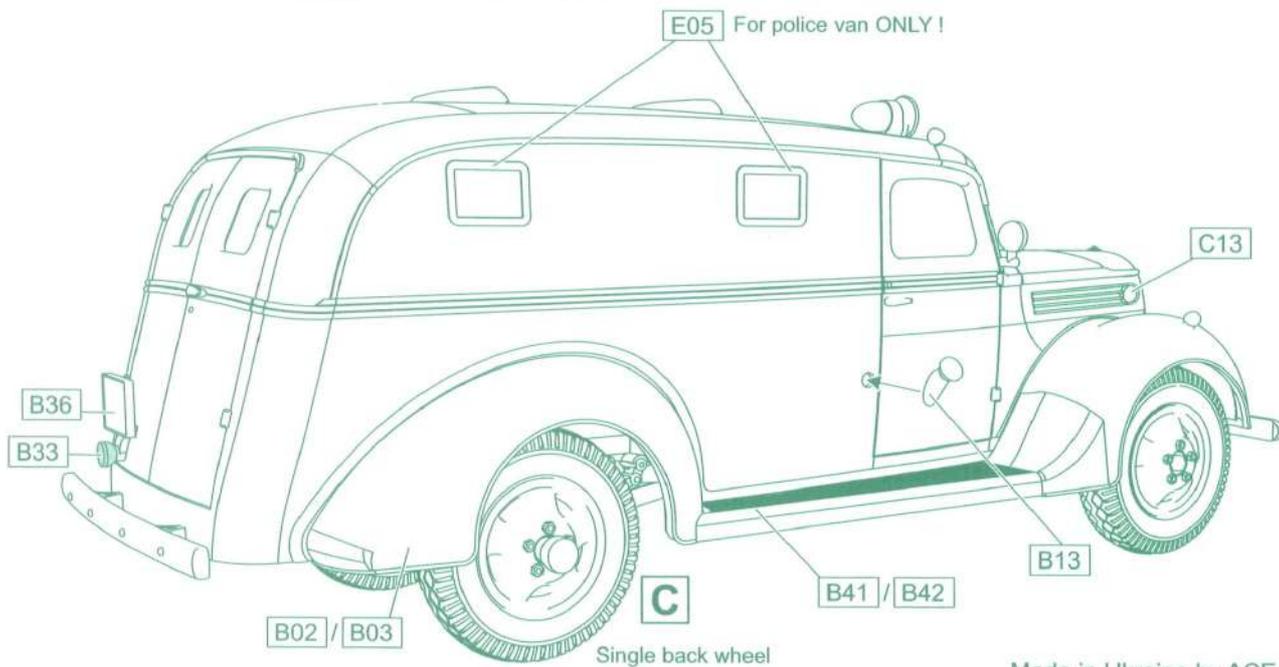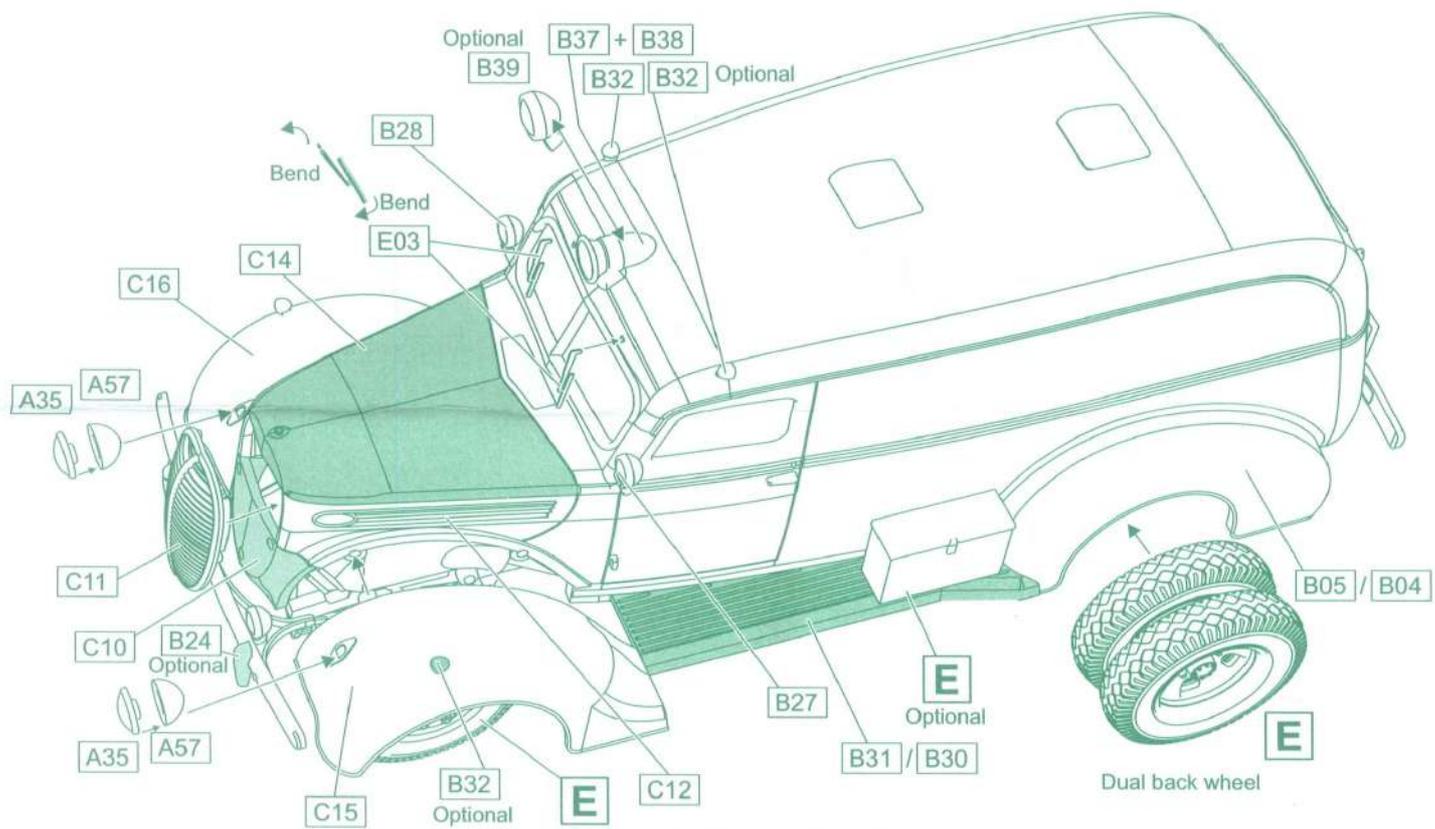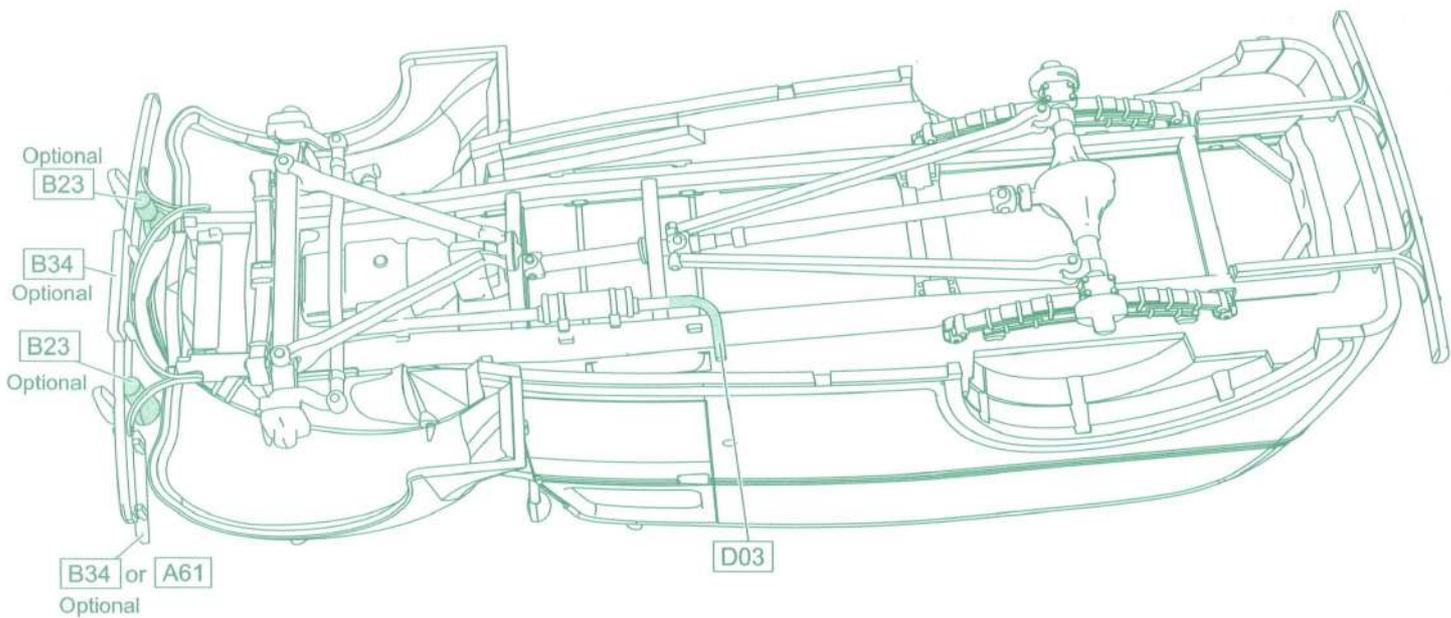


Markings and painting.

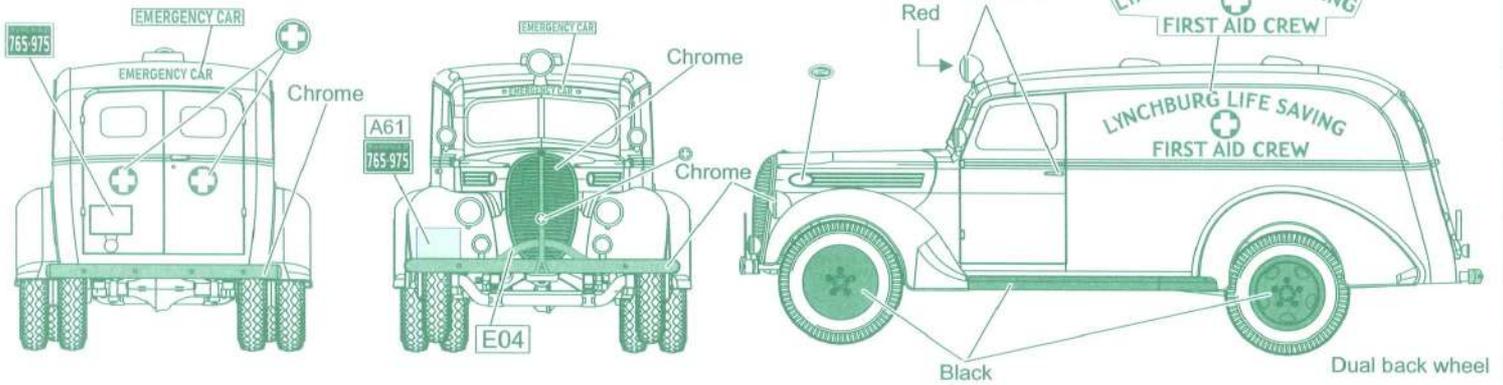


134 in Panel Van mod.1939. Lynchburg Life Saving Crew (the 3rd oldest volunteer rescue squad in the U.S. Specializing in EMS/Rescue the crew has been serving since 1934) ambulance van. Virginia. 1941. Overall white.

Санітарний фургон на 134 дюймовій базі зр.1939р. Lynchburg Life Saving Crew - добровільний рятувальний загін штату Вірджинія. 1941р. Білий.

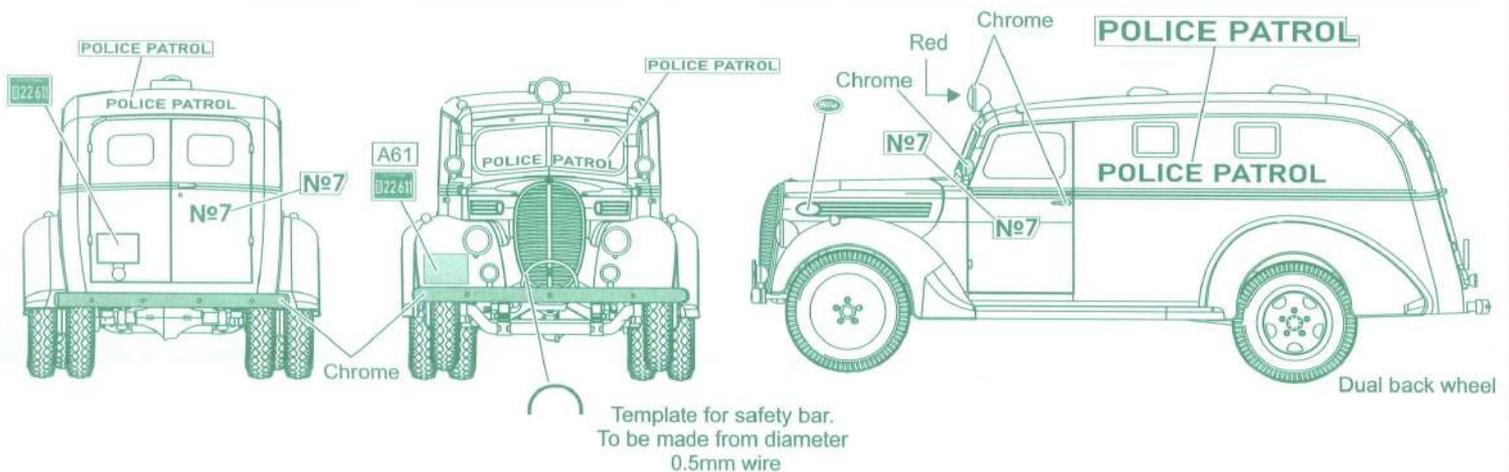

134 in one ton Panel Van mod.1939. Police Patrol/paddy wagon of San Francisco, California Police. 1941. Overall black.

Поліцейний фургон на 134 дюймовій базі зр.1939р. Поліцейний Патруль Сан Франциско штату Каліфорнія. 1940р. Чорний.

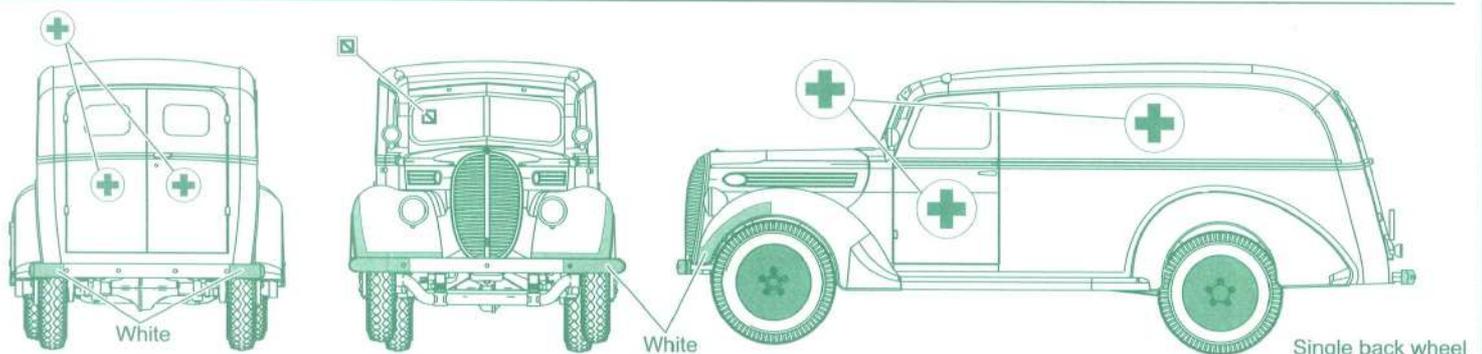

134 in Panel Van mod.1939. Romanian Army field ambulance. 1943. Overall black.

Санітарний фургон на 134 дюймовій базі зр.1939р. Армійська швидка румунської армії. 1943р. Чорний.



Check for historical photos of this AFV and other vehicles, up to date kit instructions, detailed descriptions of other ACE kits, new products and more at:
<http://www.acemodel.com.ua> or <https://www.facebook.com/acemodelkits/>